

20-24 JEEP GLADIATOR JT FRONTIER SERIES INNER FENDERS




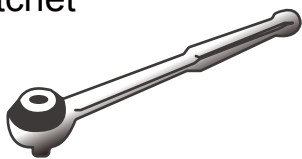





Model:	ATTJT01G102-BX
Material:	E-Coated Steel
Package Dimensions:	38.58" x 20.87" x 11.41"
Product Weight:	29.04 lbs

⚠ WARNING













This product is designed primarily to enhance the appearance of the vehicle. Do not rely on any component of this product for protection against injury or death in the event of an accident. To reduce the risk of serious injury or property damage, please read all safety warnings and carefully review all instructions and procedural notices before attempting to install or use this product.




⚠ CAUTION

✂ Properly torque and recheck fasteners and security of step tread after 250 miles and inspect frequently. Do not use if damaged.

REQUIRED TOOLS	Allen wrench 	Ratchet 
	Flathead Screwdriver 	Wrench 
	Drill 	
Safety Glasses 	Panel Remover 	Rivet Nut Installation Tool (not included)

Parts Information

NO.	Parts Name	Size	Line Graph	Qty
/	Front Liner	/		2
/	Front Liner	/		2
/	Front Liner	/		2
/	Rear Liner	/		2
/	Rear Liner	/		2
/	Rear Liner	/		2
R01	Rivet Nuts	'M6		6
B07	Allen Bolts	'M6*20-8.8		43
N09	Hex Flange Nuts	'M6		43
W13	Flat Washer	'φ6*18		41
W09	Spring Washer	'φ6		41
B15	Allen Bolts	'M8*20-8.8		6

W19	Flat Washer	' ϕ 8*24*2mm		6
W16	Spring Washer	' ϕ 8		6
B05	Allen Bolts	'M6*10-8.8		30


※Note: One pack of spare parts is provided.

Installation Instructions



Step 1: Please open the box and check that all components are included.


Step 2: Remove the original fender flares and fender liner, and prepare the parts needed to install the new fender liner.

Step 3: Install the front fender flares.

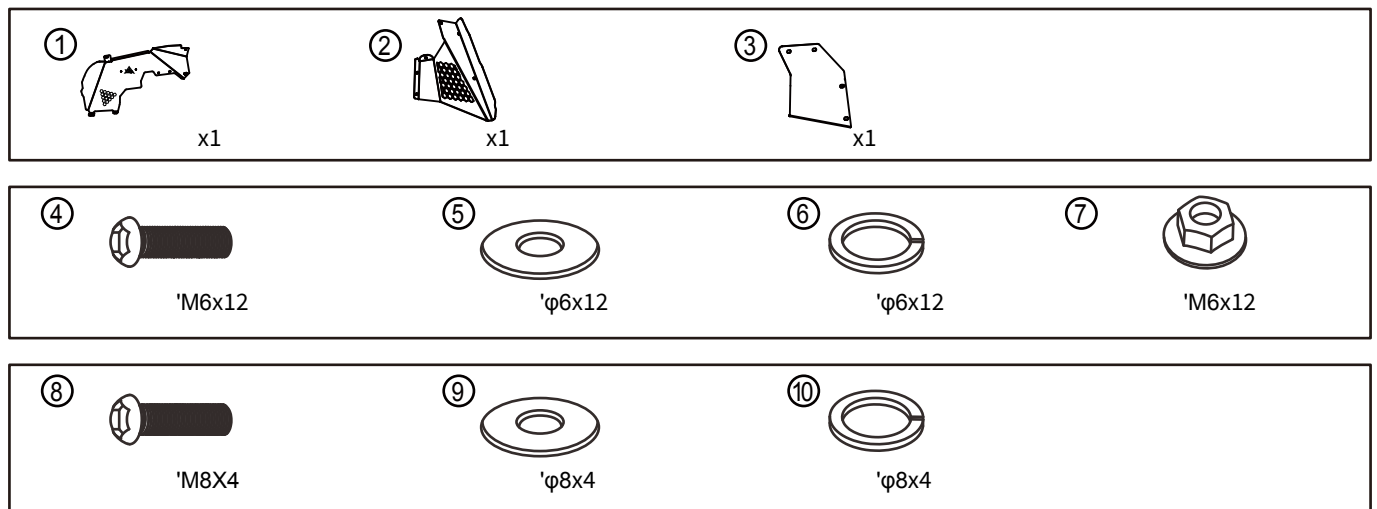




✱ Front fender liner assembling.

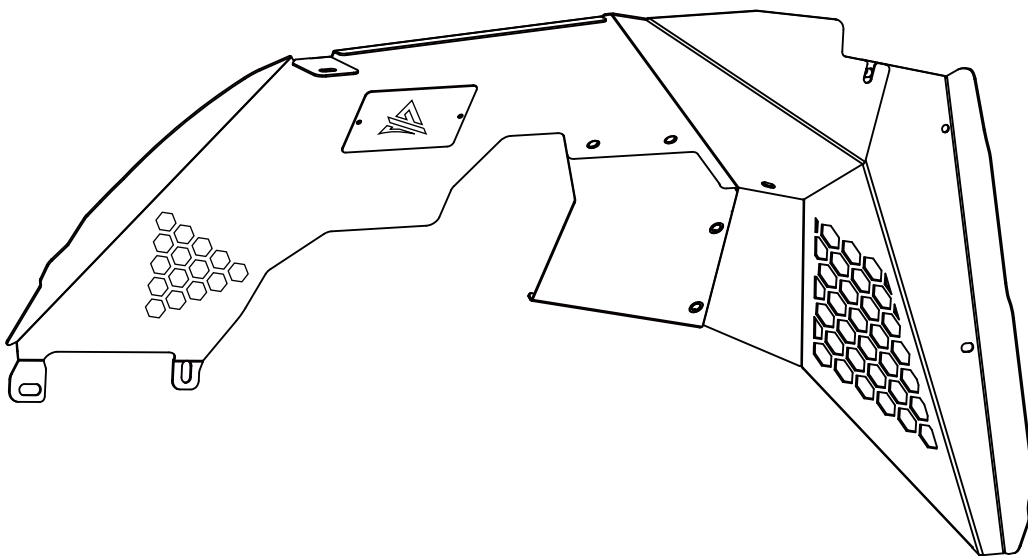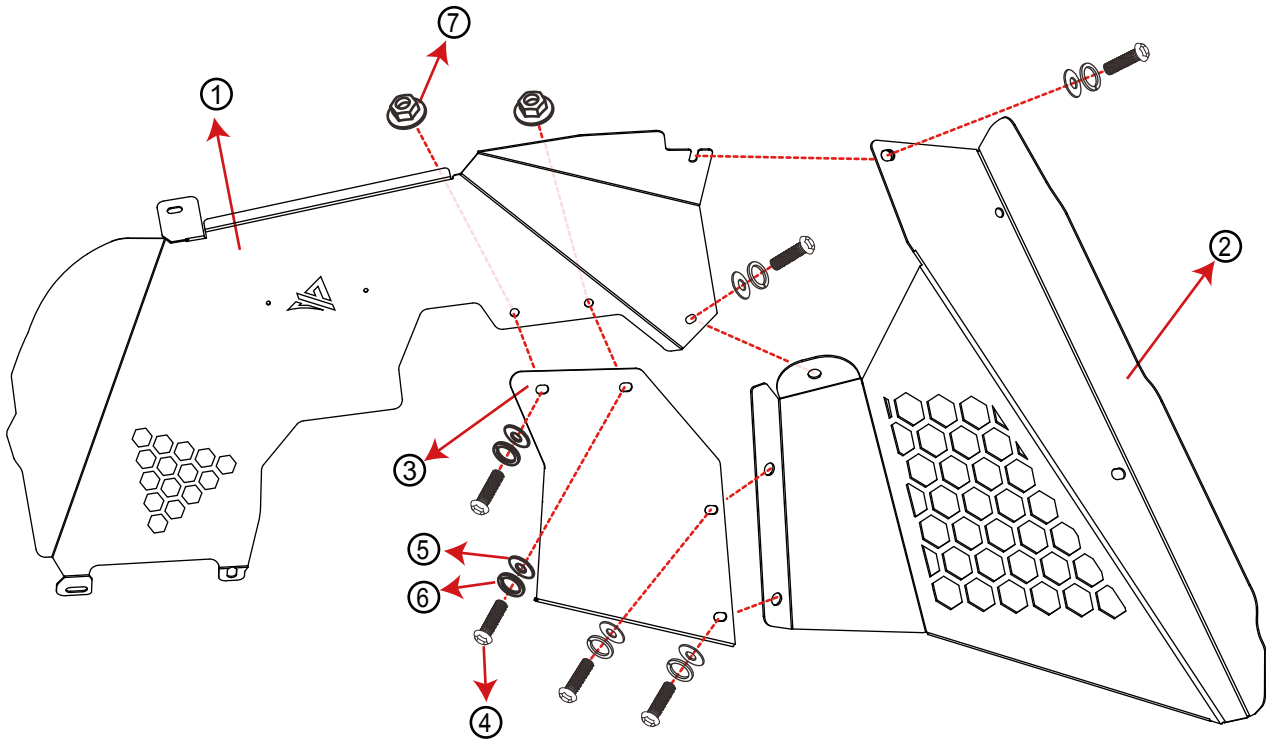

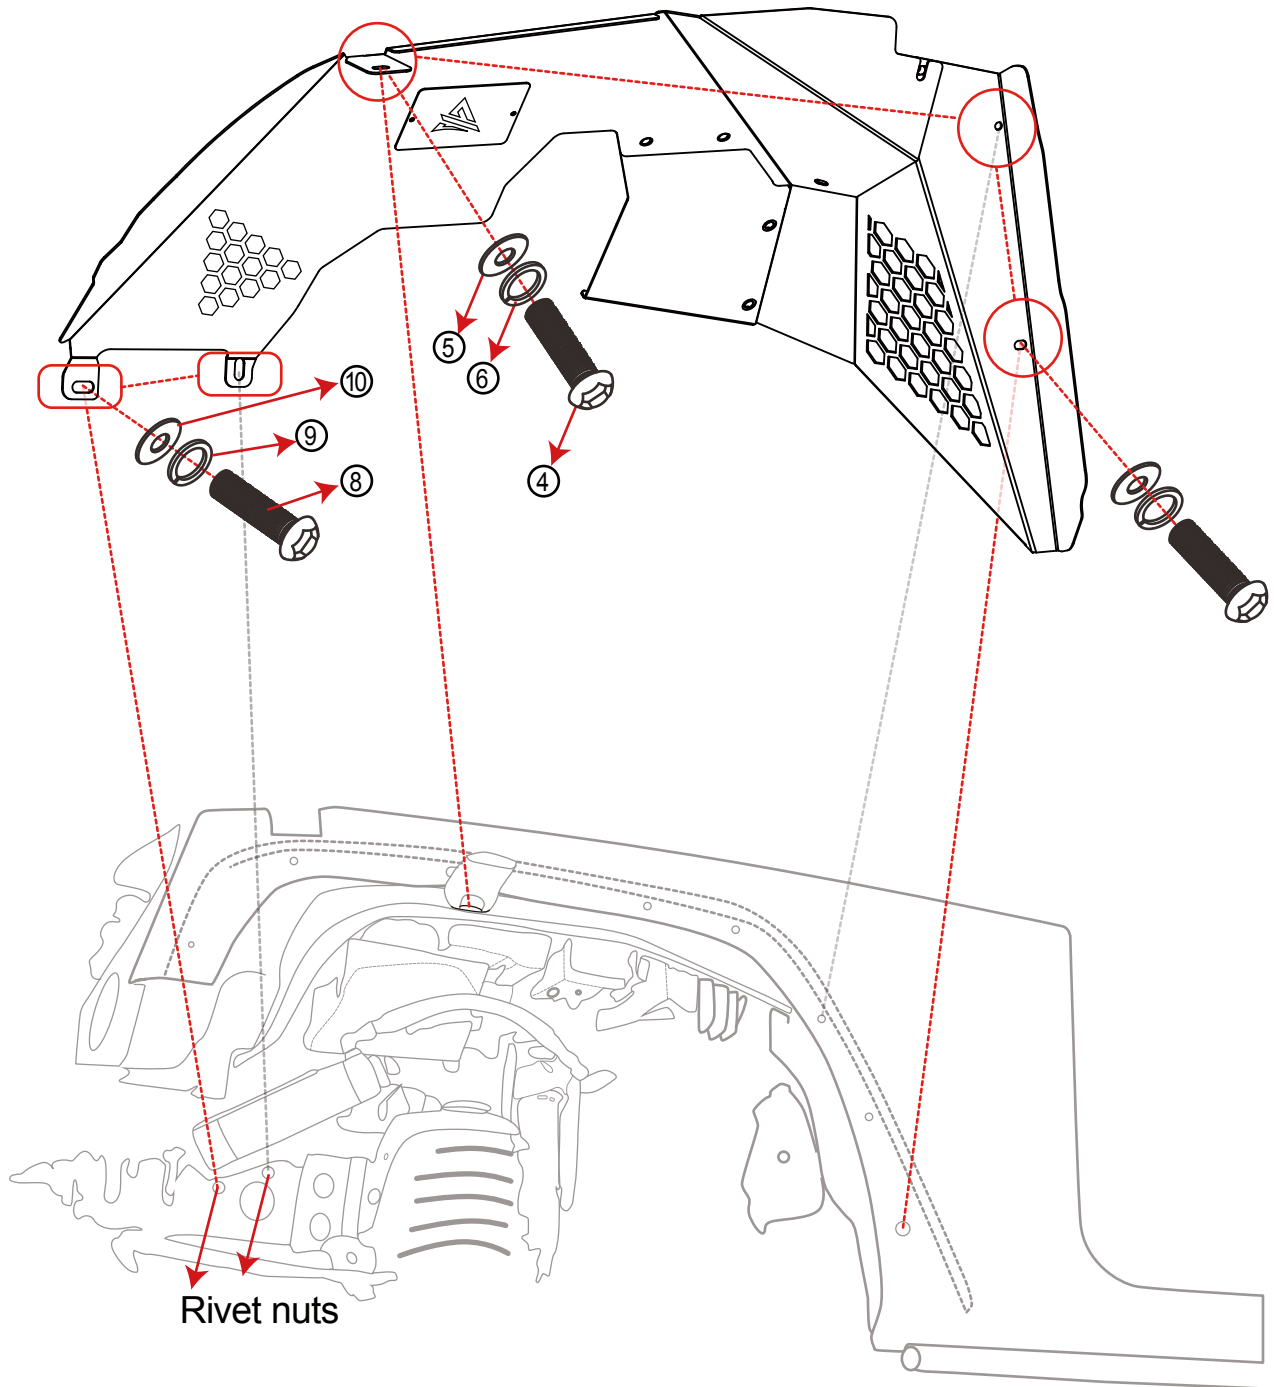

* For an easier install, plastic push clips can be used (not included).

Step 4: Rear fender liner assembling.

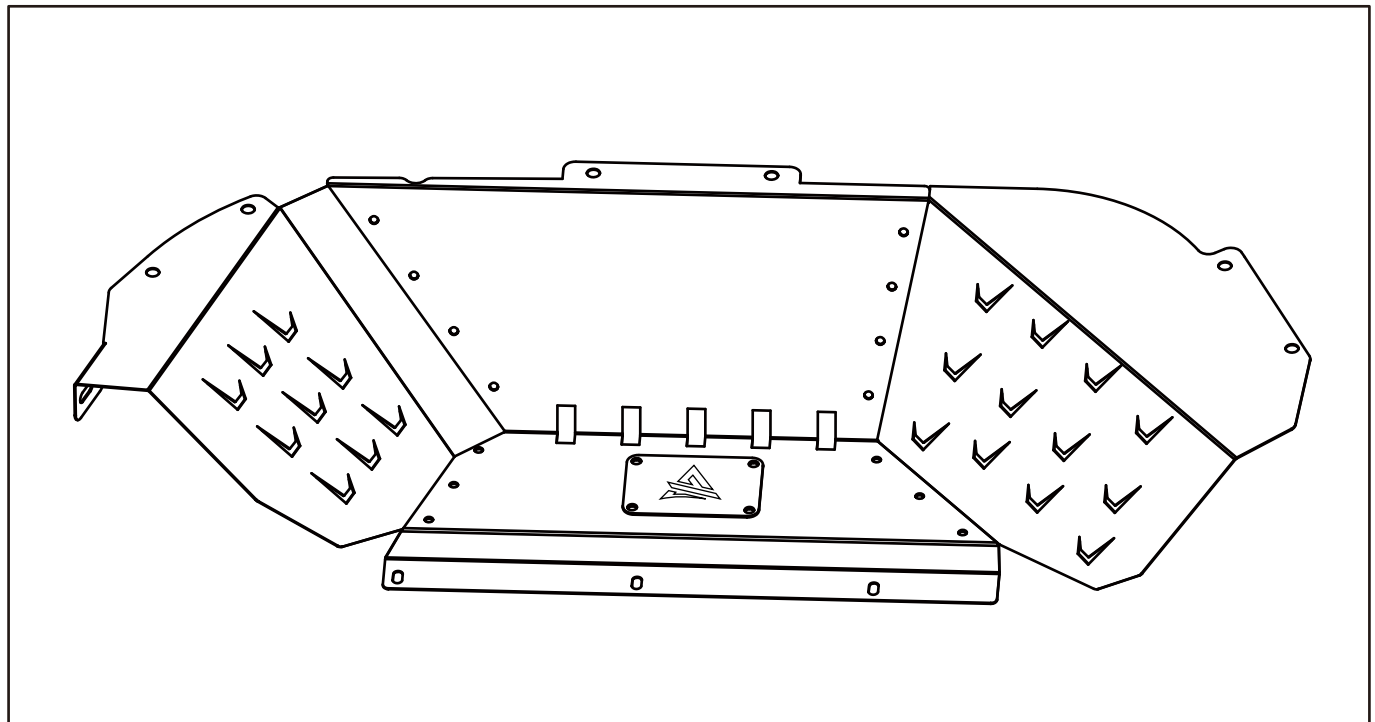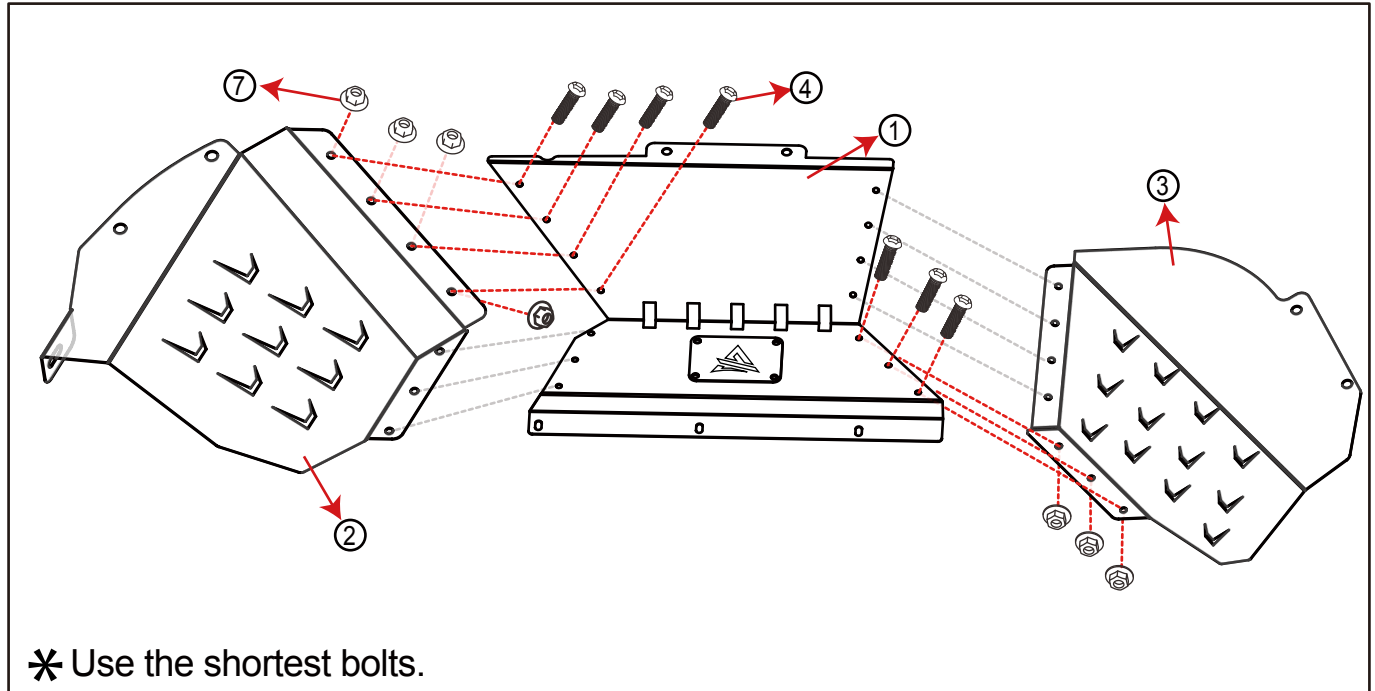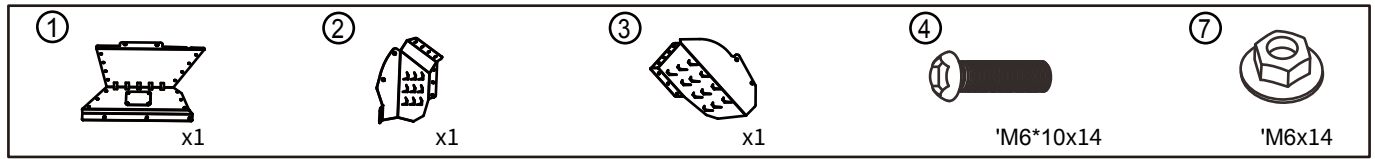

Step 5: Rear fender liner install.

