

22-24 TOYOTA TUNDRA FRONTIER SERIES RUNNING BOARDS




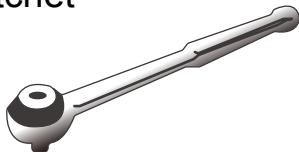



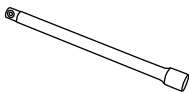




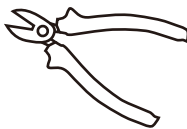
Model:	ATTTU01C101-BX
Material:	E-Coated Steel
Package Dimensions:	85.04" x6.35" x 3.03"
Product Weight:	92.4 lbs

⚠ WARNING

This product is designed primarily to enhance the appearance of the vehicle. Do not rely on any component of this product for protection against injury or death in the event of an accident. To reduce the risk of serious injury or property damage, please read all safety warnings and carefully review all instructions and procedural notices before attempting to install or use this product.










⚠ CAUTION

✂ Please recheck fasteners after 250 miles and inspect frequently.

REQUIRED TOOLS	Socket 	Ratchet 
	Flathead Screwdriver 	Wrench 
	Panel Remover 	Extension 
	Drill 	Hex Bit Socket 
	Cutting Tool 	Marker 
		Lineman Pliers 

Painter's tape		
		

Parts Information


NO.	Parts Name	Size	Illustration	Qty
/	Running Boards	2160*252mm		1
/	Brackets	/		8
/	Screw Plate	/		8
B20	Hex Bolt	'M8*25-8.8		18
N22	Hex Nut	'M8-8		18
W19	Flat Washer	'φ8*24*2mm		34
W16	Spring Washer	'φ8		34
M01	Zip Tie	5*250mm		10
/	Wiring Harness	/		4


Installation Instructions

Step 1: Open the box and check whether all components are included.



Step 2: Remove the original railing frame.

Step 3: Mount the brackets.


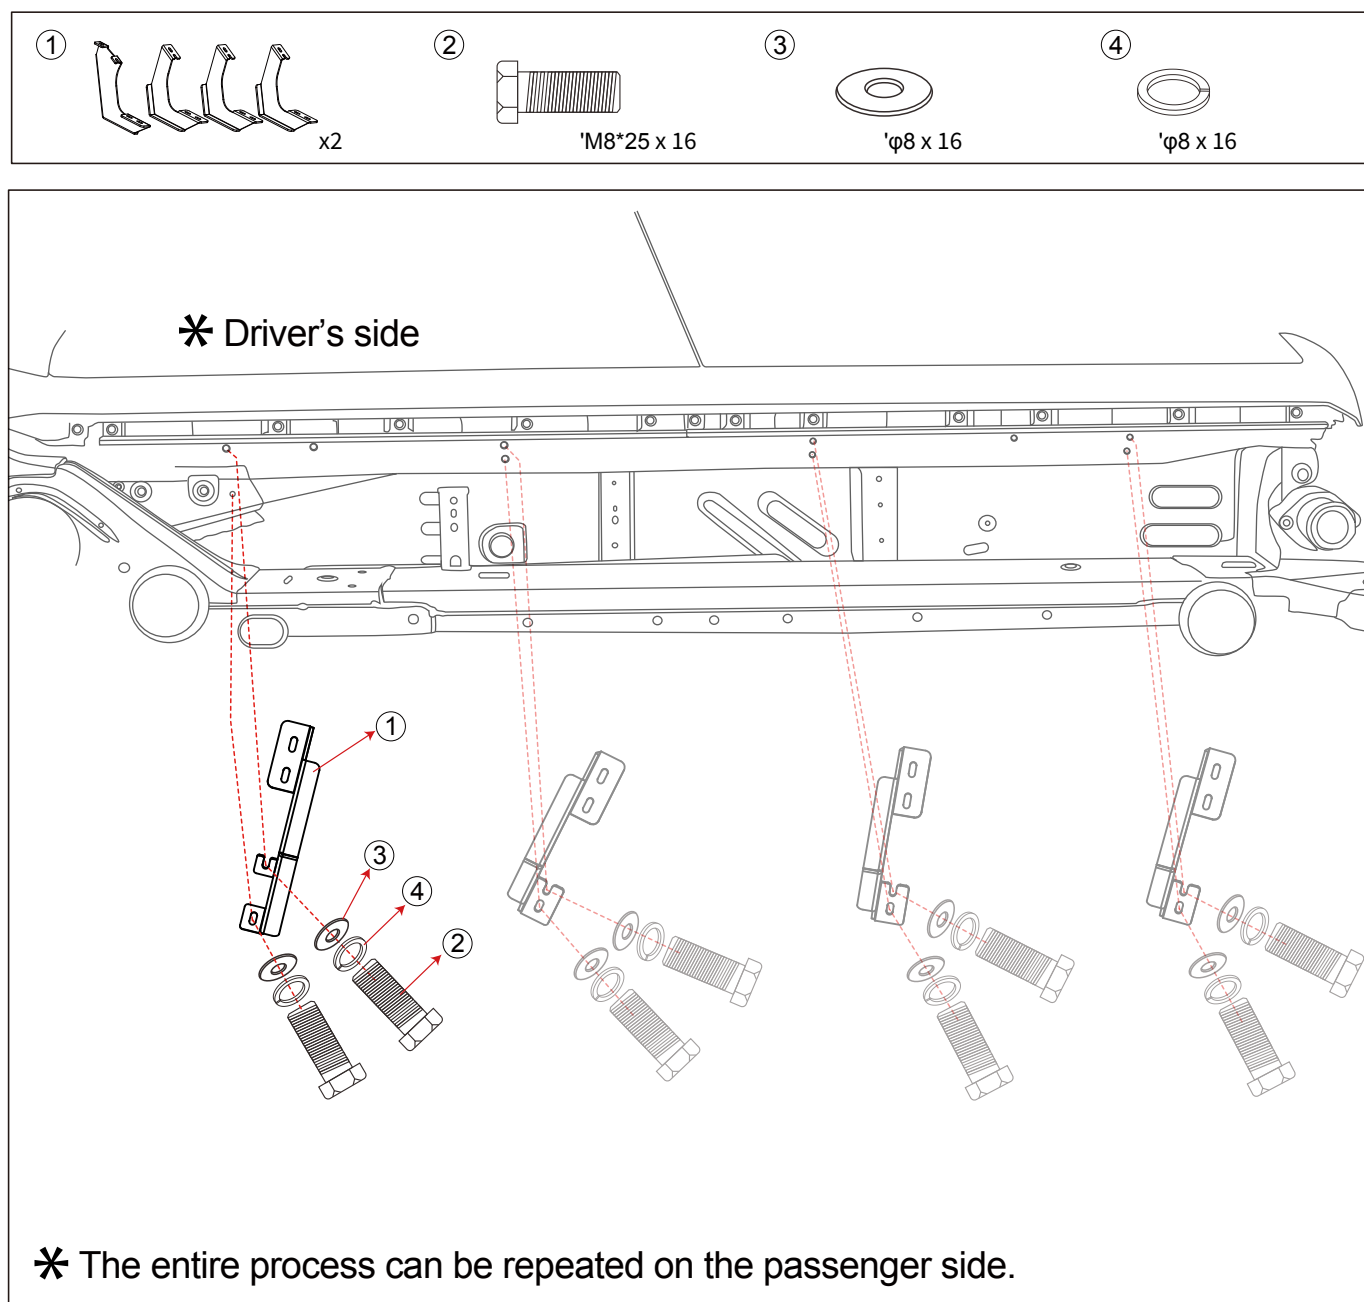


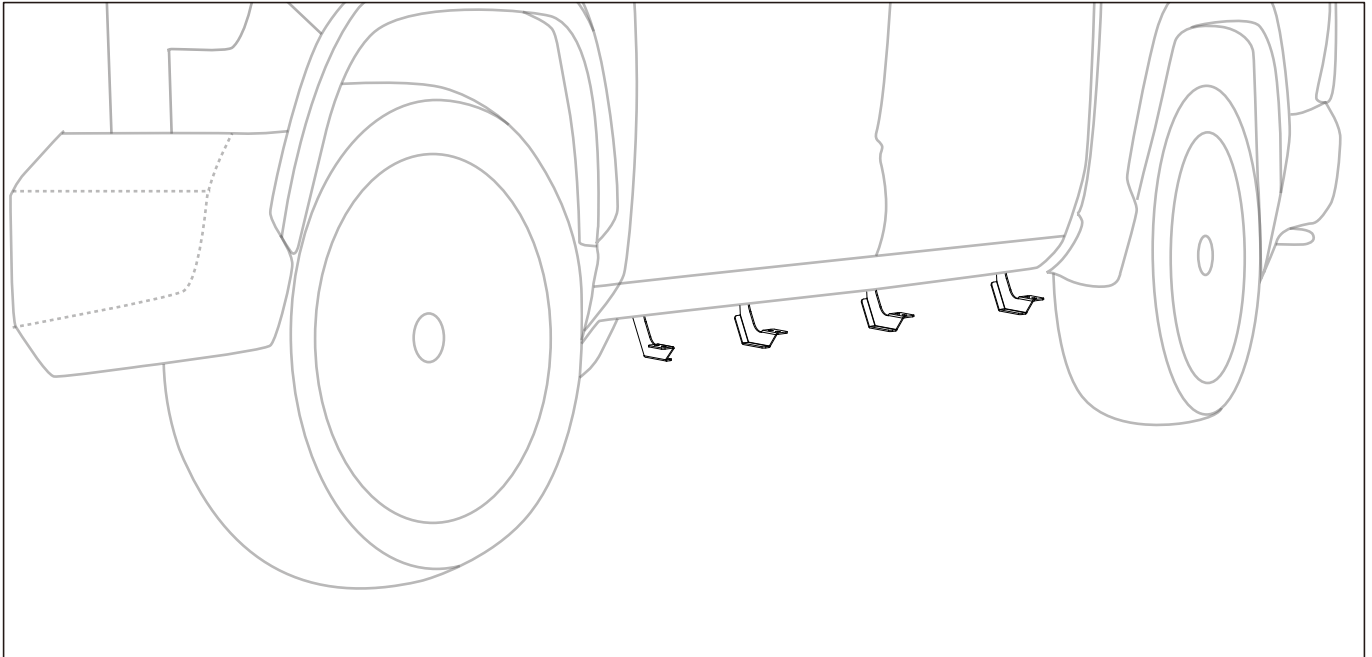

Step 2: Install the harness.

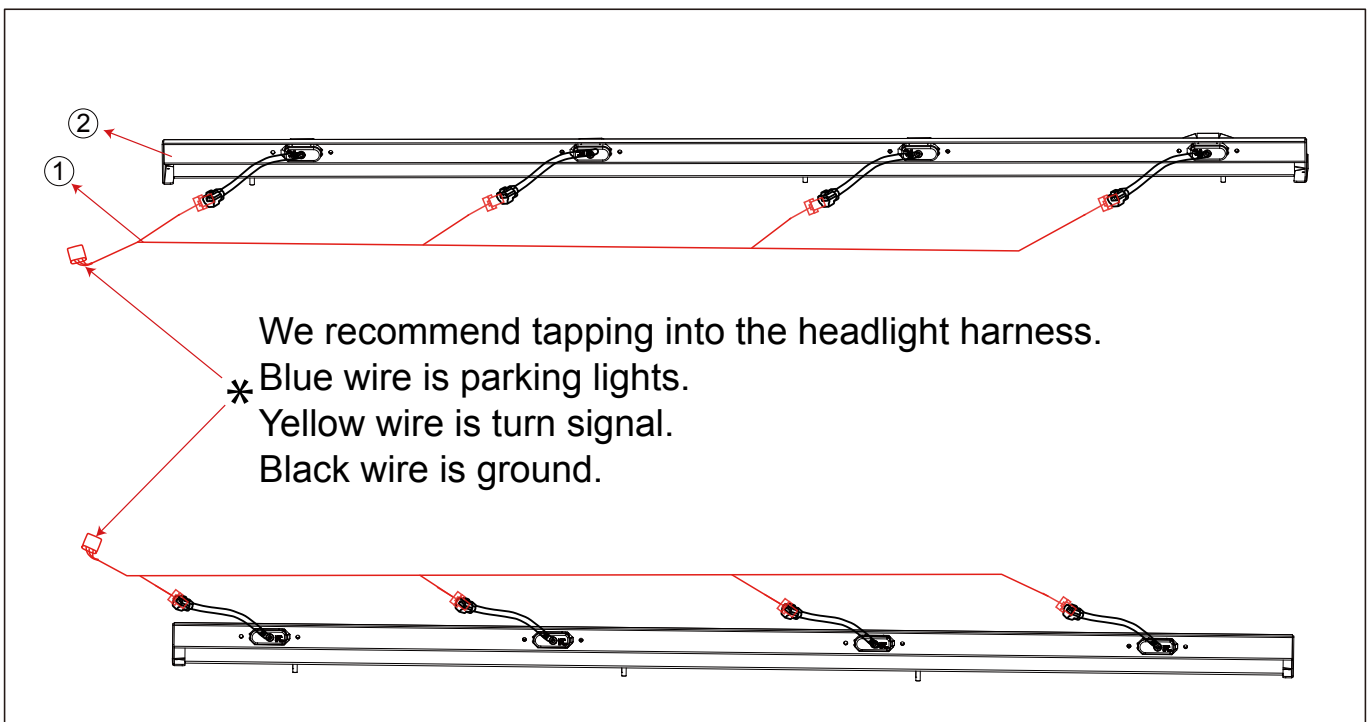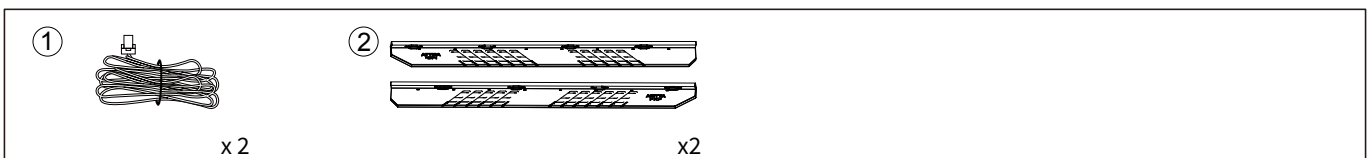

Step 3: Running board installation.

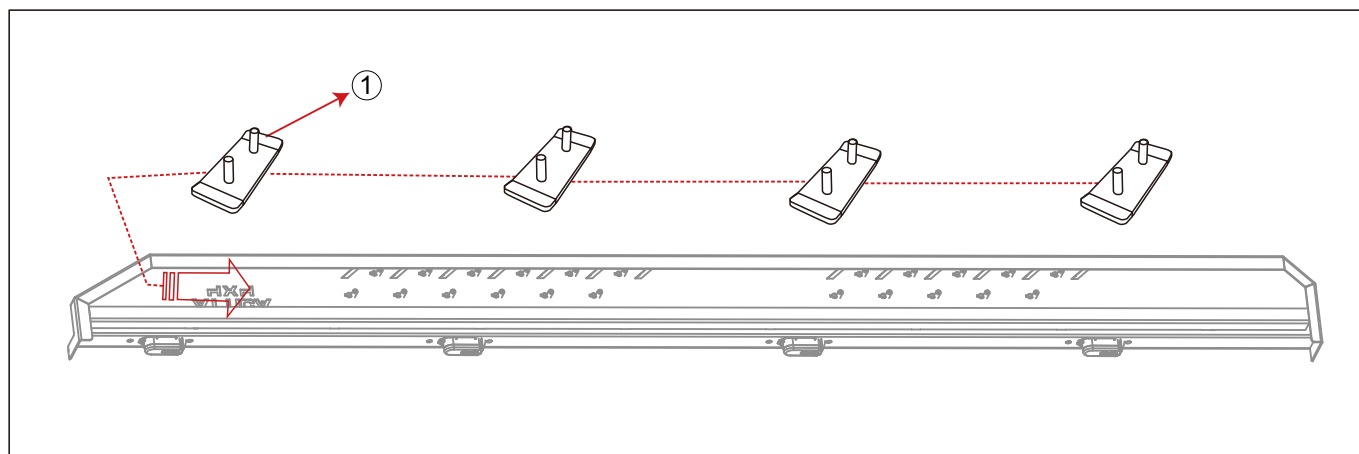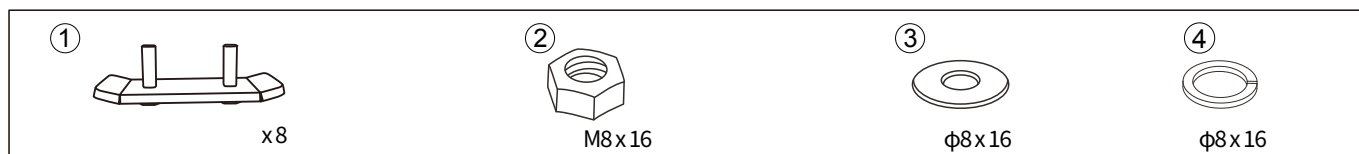

✱ The left and right sides are installed in the same manner.

